

<b>PART #</b>	<b>DESCRIPTION</b>
8812	ATTENUATOR
9931	BUTTON, ARROW SIDE
9932	BUTTON, ARROW UP/DOWN
9928	BUTTON, ENTER
9930	BUTTON, HELP
9929	BUTTON, MENU
9927	BUTTON, RUN
9958	CABLE ASSY. ( HC 11 )
6279	CABLE RS232 ASSY 6'
4593	CAPILLARY ASSEMBLY (40B)
4158	CHARCOAL (POUND)
8851	DIFFUSER
8630	FAN GUARD ASSEMBLY (W/Foam) "C-SERIES"
4299	FAN, COOLING, SPRITE 115V/50/60
4304	FEET, RUBBER (PK/4) ("C" Series Instrument Case)
8544	FEET, RUBBER (SHOCK MOUNTS) (Optical Benches)
8853	FILTER, CUT-OFF
8852	FILTER, DETECTOR
9938	FLOW TRANSDUCER, SAMPLE
4510	FUSE 3 AMP S/B (PK/5)
5933	HEATER RESISTOR, 100 OHM (115 V) (Specify Instrument)
9886	INSTRUMENT, COVER
8746	KICKER ASSEMBLY
8666	LAMP, UV SOURCE (43/43A)
8850	LENS RELAY
7725	MANUAL, MODEL 43CHL
5154	MANUAL, TEI FOR WINDOWS ("C" SERIES SOFTWARE)
4811	O-RING
4820	O-RING
4829	O-RING
4808	O-RING (Between Reaction Chamber)
4830	O-RING (PK/2)
4831	O-RING (PK/2)
8943	PCB A / D
9843	PCB C-LINK (Must Specify Program Version)
9904	PCB CONNECTOR INTERFACE
9839	PCB DIGITAL/ANALOG
11220	PCB DISPLAY
8884	PCB FLASH INTENSITY ASSY
10996	PCB FLASHER SUPPLY
8951	PCB INPUT

<b>PART #</b>	<b>DESCRIPTION</b>
9829	PCB MOTHER
8949	PCB POWER SUPPLY
9901	PCB POWER SUPPLY ( PMT )
9837	PCB PROCESSOR (Must Specify Program Version)
9950	PCB PUSH BUTTON ( B1 )
9952	PCB PUSH BUTTON ( B2 )
8765	PCB TEMPERATURE CONTROLLER
8390	PHOTOMULTIPLIER TUBE (40B, 43A, 43B, 43H, 43S)
100727-00	PMT Base Assembly, 43i
8165	POWER CORD, 115V
9267	PUMP REPAIR KIT, KNF (FOR P/N 9263)
9263	PUMP VACUUM 115/60 (PU559N010)
9262	PUMP VACUUM 220/50
18061	RUBBER FEET (Insulator) (Feet for the Pumps)
8774	SOCKET ASSEMBLY, UV LAMP (43A/H) (TRIGGER PACK)
12118	SWITCH POWER MODE SP3T
5382	THERMISTOR IM-1002-A5
9877	TRANSDUCER, PRESSURE ASSY.
5512	TUBING, TEFLON 1/4" (FOOT)