

PART #	DESCRIPTION
9931	BUTTON, ARROW SIDE
9932	BUTTON, ARROW UP/DOWN
9928	BUTTON, ENTER
9930	BUTTON, HELP
9929	BUTTON, MENU
9927	BUTTON, RUN
14767	CASE
14766	COVER
4304	FEET, RUBBER (PK/4) ("C" Series Instrument Case)
4510	FUSE 3 AMP S/B (PK/5)
9843	PCB C-LINK (Must Specify Program Version)
9904	PCB CONNECTOR INTERFACE
3290	PCB CONTROL COMMUNICATIONS ASSEMBLY (Hardwire)
3537	PCB CONTROL OPTICAL HEAD (FIBER OPTIC)
11220	PCB DISPLAY
3513	PCB I/O CONTROLLER
9956	PCB I/O WITH CABLE ASSEMBLY
3315	PCB POWER SUPPLY CONTROLLER ASSEMBLY
9837	PCB PROCESSOR (Must Specify Program Version)
9950	PCB PUSH BUTTON (B1)
9952	PCB PUSH BUTTON (B2)
3454	PCB REAR CONNECT INTERFACE
11289	RECEPTACLE 2 POLE
12118	SWITCH POWER MODE SP3T