

Versatile, dependable chillers provide years of cooling capability for critical applications that require large process cooling. Cooling capacities up to 24000 watts.

## Thermo Scientific NESLAB HX Recirculating Chillers



### Ideal for diverse applications within the following markets

- Laser
- Industrial
- Semiconductor
- Medical
- Printing

### Tight Stability for Process Control

Thermo Scientific NESLAB HX chillers offer the configurability and temperature stability necessary to keep critical processes running at constant temperatures.

### Flexible Configurations

- Air-cooled and water-cooled condensers
- Multiple pumping options
- Extended temperature ranges from -15°C to +90°C
- Easy to use controller
- Broad range of available options and accessories

### Smart Design


- Stainless steel reservoir and evaporator coils ensure durability
- Hot gas by-pass allows for tight temperature stability and longer compressor life
- Integrated fluid pressure gauge and flow control to optimize your process needs

Feature	Benefit
Auto Refill	Allows for automatic refilling from a customer-supplied water source to ensure the proper fluid level is maintained.
High/Low Temperature Alarms	Allows the user to configure as a warning, or to shut the unit down to keep application safe.
Auto Restart	In the event of a power failure, the unit will restart automatically once power has been restored ensuring productivity.
Low Level Alarm	Alerts user when reservoir level is too low.
Analog I/O	15-pin analog port allows for remote status of alarms and remote on/off capabilities

**Options include:**


Feature	Benefit
Extended Fluid Temperature Range	Allows heating as well as cooling and high temperature operation up to +90°C.
TC-400 Temperature Controller <ul style="list-style-type: none"> <li>• LED status indicators</li> <li>• Alarm status</li> <li>• Low flow</li> <li>• RS232/RS485</li> </ul>	A fully programmable, self diagnostic microprocessor controller allows for more sophisticated monitoring and control. Provides digital communication for remote operation, monitoring, and data logging.
Remote Temperature Sensor	Allows for remote temperature control at your application.
DI Water Package	Partial flow cartridge provides fluid resistivity between 1 MΩ/cm <sup>2</sup> and 3 MΩ/cm <sup>2</sup> .
Plumbing Package	Provides tubing, insulation, and plumbing connections for easy application installation.
Condenser Filters	Removable filter allows for easy maintenance.
Fluid Filtration 5, 25, 40 micron (full flow or partial flow)	Reduces fluid particulates down to the selected micron level.
Ethylene Glycol	Allows circulation at temperatures below +8°C.
Air-Cooled Condenser	Uses ambient-temperature room air to remove application heat.
Water-Cooled Condenser	Uses facility water to remove application heat.

**Cooling Capacity for NESLAB HX Recirculating Chillers**

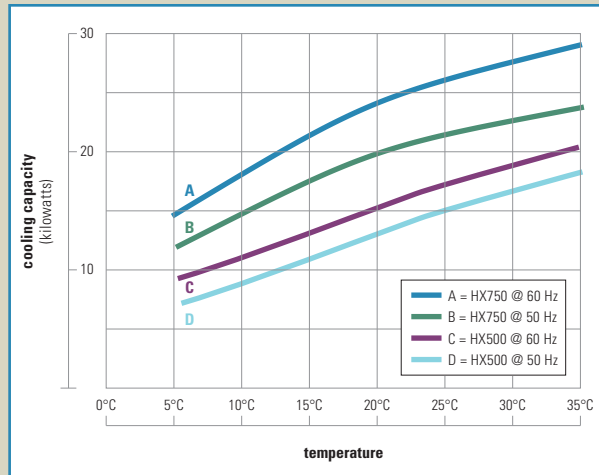

Cooling capacity based on units with CP75 pumps with no backpressure. Other pumps will affect cooling capacity performance.

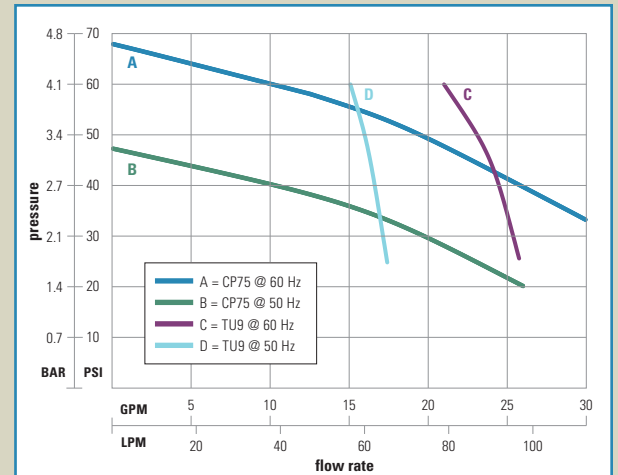

**Pumping Capacity for NESLAB HX Recirculating Chillers**



Pressure values for centrifugal pumps are differential pressures between the inlet and the outlet of the unit.

## Thermo Scientific NESLAB HX Recirculating Chillers



	NESLAB HX 500	NESLAB HX 750
<b>Setpoint Temperature Range</b>	+5°C to +35°C (+41°F to +95°F)	+5°C to +35°C (+41°F to +95°F)
<b>Ambient Temperature Range</b>	+13°C to +35°C (+55°F to +95°F)	+13°C to +35°C (+55°F to +95°F)
<b>Temperature Stability</b>	±0.1°C	±0.1°C
<b>Setpoint Cooling Capacity</b>		
60 Hz at +20°C	15700 W / 53500 BTU	24000 W / 81840 BTU
50 Hz at +20°C	13030 W / 44430 BTU	19920 W / 67925 BTU
<b>Reservoir Volume</b>	28 gallons (106 liters)	40 gallons (151 liters)
<b>Refrigerant</b>		
60 Hz	R22	R-404A
50 Hz	HFC	HFC
<b>Physical Dimensions (H x W x D)</b>	51.6 x 46.0 x 28.8 in (131.1 x 116.8 x 73 cm)	64.8 x 46.0 x 29.0 in (164.5 x 116.8 x 73.7 cm)
<b>CP75 Pump</b>		
60 Hz	19 gpm @ 50 psig (71.9 lpm @ 3.4 bar)	19 gpm @ 50 psig (71.9 lpm @ 3.4 bar)
50 Hz	10 gpm @ 40 psig (37.9 lpm @ 2.8 bar)	10 gpm @ 40 psig (37.9 lpm @ 2.8 bar)
<b>TU9 Pump</b>		
60 Hz	23 gpm @ 50 psig (87.1 lpm @ 3.4 bar)	23 gpm @ 50 psig (87.1 lpm @ 3.4 bar)
50 Hz	16 gpm @ 50 psig (60.1 lpm @ 3.4 bar)	16 gpm @ 50 psig (60.1 lpm @ 3.4 bar)
<b>Unit Weight</b>	746 lb (338.4 kg)	971 lb (440.4 kg)
<b>Voltage Options</b>		
208-230 V/60 Hz/3 phase	Available	Available
460 V/60 Hz/3 phase	Available	Available
380-415 V/50 Hz/3 phase	Available	Available
<b>Compliance (50 Hz units)</b>		

Specifications obtained at sea level using water as the recirculating fluid at a +20°C process setpoint, +20°C ambient condition, and at nominal operating voltage. Other fluids, process temperatures, ambient temperatures, altitudes, or operating voltages will affect performance. Cooling capacity and amperage ratings based on units with CP75 pumps with no backpressure. Other pumps will affect cooling capacity performance. Specifications subject to change.

Thermo Fisher Scientific Inc. (NYSE: TMO) is the world leader in serving science, enabling our customers to make the world healthier, cleaner and safer. With an annual revenue rate of more than \$10.5 billion, we employ 34,000 people and serve over 350,000 customers within pharmaceutical and biotech companies, hospitals and clinical diagnostic labs, universities, research institutions and government agencies, as well as environmental and industrial process control settings. Serving customers through two premier brands, Thermo Scientific and Fisher Scientific, we help solve analytical challenges from routine testing to complex research and discovery. Thermo Scientific offers customers a complete range of high-end analytical instruments as well as laboratory equipment, software, services, consumables and reagents to enable integrated laboratory workflow solutions. Fisher Scientific provides a complete portfolio of laboratory equipment, chemicals, supplies and services used in healthcare, scientific research, safety and education. Together, we offer the most convenient purchasing options to customers and continuously advance our technologies to accelerate the pace of scientific discovery, enhance value for customers and fuel growth for shareholders and employees alike. Visit [www.thermofisher.com](http://www.thermofisher.com).

**For more information about Thermo Scientific NESLAB recirculating chillers, visit [www.thermo.com/thermoflex](http://www.thermo.com/thermoflex), or see our comprehensive range of temperature control equipment at [www.thermo.com/tcprocess](http://www.thermo.com/tcprocess).**

© 2009 Thermo Fisher Scientific Inc. All rights reserved. All trademarks are the property of Thermo Fisher Scientific Inc. and its subsidiaries. Results may vary under different operating conditions. Specifications, terms and pricing are subject to change. Not all products are available in all countries. Please consult your local sales representative for details.

**North America:** USA/Canada tollfree: +1 (800) 258-0830;  
USA: +1 (603) 436-9444 or [info.tc.us@thermofisher.com](mailto:info.tc.us@thermofisher.com)  
**Europe:** Benelux: +31 (0) 76 579 55 55 or [info.tc.nl@thermofisher.com](mailto:info.tc.nl@thermofisher.com);  
France: +33 (0) 1 60 92 48 00 or [info.tc.fr@thermofisher.com](mailto:info.tc.fr@thermofisher.com);  
Germany: +49 (0) 721 4 09 44 44 or [info.tc.de@thermofisher.com](mailto:info.tc.de@thermofisher.com);  
United Kingdom: +44 (0) 1785 82 52 00 or [info.tc.uk@thermofisher.com](mailto:info.tc.uk@thermofisher.com)  
**Asia:** China: +86 (21) 68 65 45 88 or [info.tc.china@thermofisher.com](mailto:info.tc.china@thermofisher.com);  
India: +91 (22) 27 78 11 01 or [info.tc.in@thermofisher.com](mailto:info.tc.in@thermofisher.com)

[www.thermo.com/tcprocess](http://www.thermo.com/tcprocess)

**Thermo**  
SCIENTIFIC