

Mercury Probe Controller, Model 82i

Electronic control of probe temperature, pressure, flow rate and automated functions



Key Features

- Microprocessor driven for added automation
- Automates probe calibration
- Enables automated stinger and filter blowback
- Provides power to the probe eliminating the need for power at the stack
- Monitor and regulates pressure using electronic transducers and regulators

The Thermo Scientific Mercury Probe Controller, Model 82i is one of the four major components of the Mercury Freedom System.

The Model 82i is microprocessor-driven and connected by an umbilical to the stack probe and mercury converter. The controller automates probe calibration and dynamic spiking, and confirms auto dilution. In addition, it monitors probe temperature, measures flow rates and pressure in the sampling loop, and enables automated filter blowback.

Designed to meet the provisions of 40CFR Parts 60 and 75, the Mercury Freedom System provides a complete mercury monitoring solution that reports elemental, ionic, and total mercury in exhaust stacks from both coal-fired boilers and waste incinerators.

The Model 82i also offers the benefits of the new *iSeries* gas analyzer platform.

The *iSeries* platform features flexible communications, increased serviceability, and an easier to use interface. Ethernet connectivity provides efficient remote access, allowing the user to download measurement information directly from the instrument without having to be on site. Captive hardware and slide-apart modules allows easy access for service and periodic maintenance.

You can easily program short-cut keys to allow you to jump directly to frequently accessed functions, menus or screens. The larger interface screen can display up to five lines of measurement information while the primary reporting screen remains visible.


Mercury Probe Controller, Model 82i

To maintain optimal product performance, you need immediate access to experts worldwide, as well as priority status when your air quality equipment needs repair or replacement. We offer comprehensive, flexible support solutions for all phases of the product life cycle. Through predictable, fixed-cost pricing, our services help protect the return on investment and total cost of ownership of your Thermo Scientific air quality products.

Product Specifications

Operating Temperature	5 ^o - 40 ^o C
Power Requirements	120 VAC, 15 amp circuit
	220 VAC, one 15 amp circuit
	220 VAC, one 30 amp circuit for <200' line
	220 VAC, two 30 amp circuits for >200' line
Size and Weight	16.75" (425 mm) W x 8.62" (H) x 23" (D), 48lbs.
	425 mm (W) x 219 mm (H) x 584 mm (D), 21.8 kg
Air Requirements	10 lpm zero air
	4 CFM dry air

Model 82i Hg Probe Controller

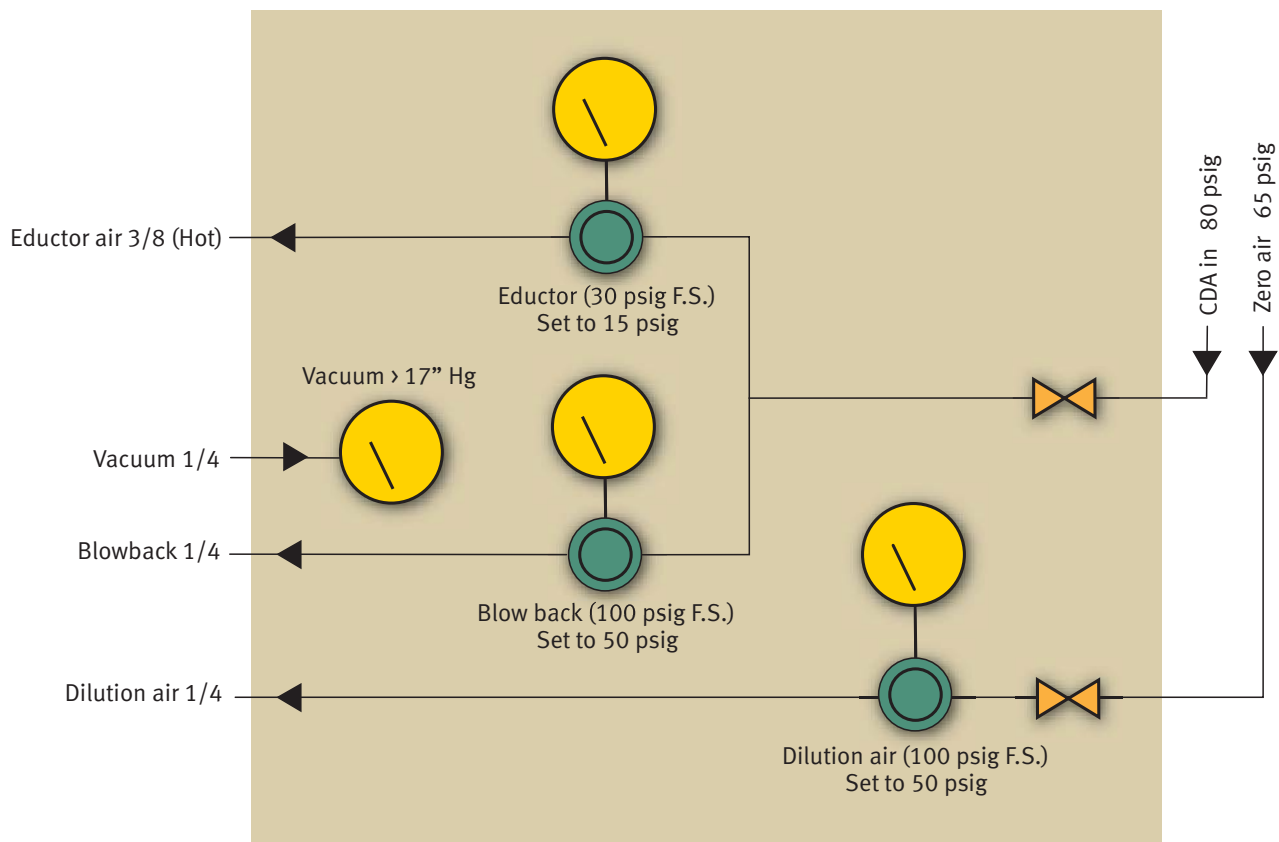

This specification sheet is for informational purposes only and is subject to change without notice. Thermo Fisher Scientific makes no warranties, expressed or implied, in this product summary. © 2009 Thermo Fisher Scientific, Inc. All rights reserved Thermo Fisher Scientific, Inc.

This product is manufactured in a plant whose quality management system is ISO 9001 certified.

**Environmental
Instruments Division**
Air Quality Instruments

27 Forge Parkway
Franklin, MA 02038 USA

(866) 282-0430
(508) 520-0430
(508) 520-1460 fax

www.thermo.com/air

Lit_82iAQI_08/09

Thermo
SCIENTIFIC